

Wax always worked in the past! Why change now?



Because NOW there's a better way!

Fernco's revolutionary **WAX FREE TOILET SEAL**

In the true spirit of the American way, innovative minds and engineering give us a better way to get things done. Horses and buggies, the telegraph and ice boxes all worked in the past, but today we get to enjoy cars, cell phones and refrigerators.

Now, messy wax rings are a thing of the past. Today you can enjoy the quick, clean and easy Wax Free Toilet Seal from Fernco. No mess No guess. Just confidence in a dependable seal. Available for 3" and 4" drain pipes. **Conforms to ASTM A 1045.**



Peel



Stick



Install

PROVEN. PREFERRED. PROFESSIONAL.



United States
PH: 810-653-9626
FX: 810-653-8714

www.fernco.com

Canada
PH: 519-332-6711
FX: 519-332-8610



Wax Free Toilet Seal

The quick, clean and easy way to install a toilet.

Not only is it quick, clean and easy, but it is the only toilet seal that lets you **"feel the seal."** As you lower the toilet onto the flange you can feel the unique sealing rings of the Wax Free Toilet Seal compress and seal against the inside walls of the drain pipe. NO mess. NO guess. Just confidence in a reliable seal. After all, it's made by Fernco.

CONFORMS TO ASTM A 1045

A strong, flexible adhesive creates a positive seal to the bottom of the toilet.

Size dimension accommodates floors raised above the toilet flange by up to 3/4".

Flexible ribs form a tight, positive seal to the inside of the drain pipe.

NO MORE GUESSING if there is a seal between the toilet and the drain pipe.




FTS TECHNICAL SPECS


- Seals on floors raised above the flange by up to 3/4"
- No need for flange risers or stacked wax rings
- Ideal for in-floor radiant heat systems
- Impervious to mold and mildew
- Centers itself and the toilet to the drain
- Toilet can be removed and reinstalled with the same Fernco Wax Free Toilet Seal still attached
- Made of flexible PVC and will move with a wobbly toilet



The **FTS-3** Wax Free Toilet Seal

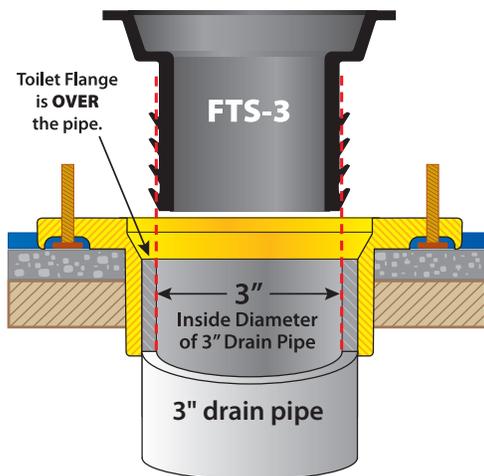

The **NEW FTS-4** Wax Free Toilet Seal

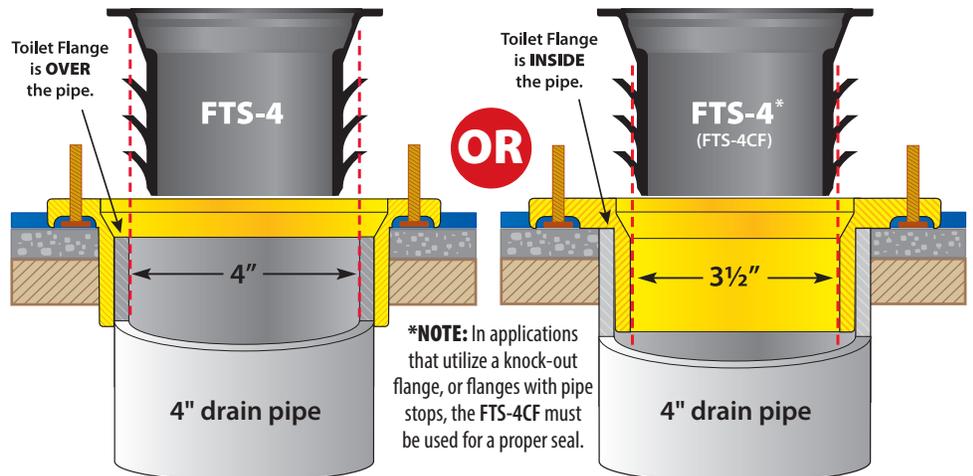

***NOTE:** In applications that utilize a knock-out flange, or flanges with pipe stops, the FTS-4CF must be used for a proper seal.

TOILET HORN MUST BE CLEAN BEFORE INSTALLATION

1. Remove old wax with a putty knife
2. Clean away any remaining wax
3. Use Rubbing Alcohol on a towel or rag to remove any remaining wax
4. Dry surface completely before installing the Wax Free Toilet Seal

FTS-4 is also Ideal for most 4" Closet Wall Carriers

